


54-550 Removal and installation of sensor on mechanical tachometer

Removal

- 1 Remove instrument cluster.**

- 2 Pull harness from sensor (3).**

- 3 Unscrew sensor (3) from tachometer.**

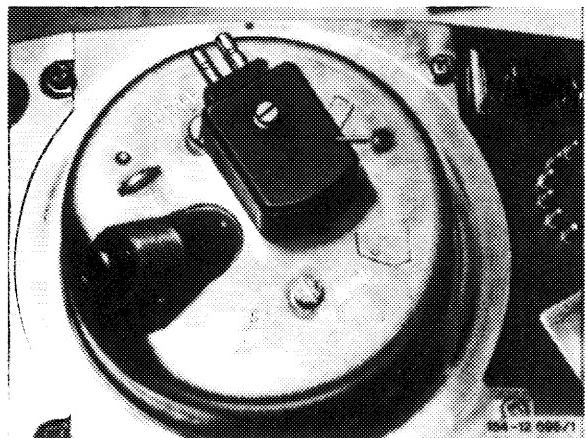

Model 123

Installation

- 4 For installation proceed vice versa.**

- 5 Perform function test on road.**